


Portable ECO Folding Gates

IllinoisEngineeredProducts.com
877.437.4623

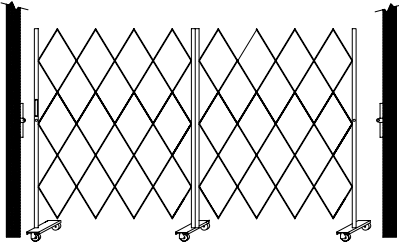


Finished Assembly



Tools Needed

Flathead Screwdriver



3/4" (19mm) Wrench or Socket



Parts Included

1/4" - 20 x 3/4"
Carriage Bolt (3)



1/4" - 20 x 3/8"
Round Head Bolt (3)




Washer (3)



Lock Washer (6)



Brace (6)



Small Nut (3)




Large Nut (6)



2 1/2 Caster (6)




Wall Locking Bar (2)

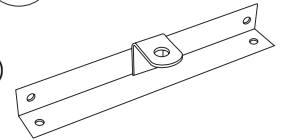


INSTALLATION INSTRUCTIONS


- 1) Bolt both sides of gate together at the top, middle and bottom by using the carriage bolts, washers and small nuts. (See Figure 1)

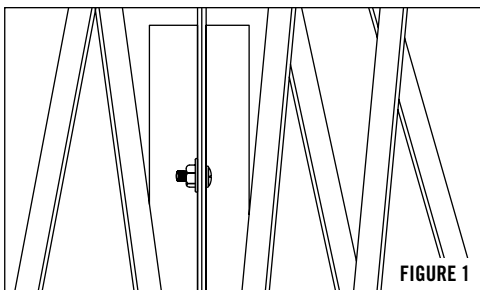

- 2) Insert each gate end into axle support. Insert round head bolt and tighten with screwdriver. (See Figure 2)

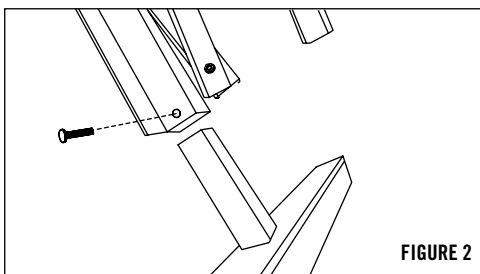

- 3) Attach casters to axle supports. Put caster through the brace and opening in the axle support and tighten with lock washer and large nut. Use a 3/4" wrench to tighten. (See Figure 3)

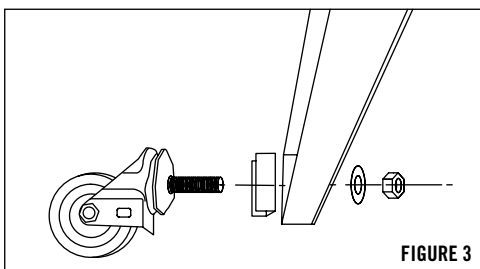


PORTABLE ADD-ON UNIT:

Repeat steps 1-3

TO MOVE GATE:

Collapse gate, lock axle locking bars into pins and roll to desired location. (See Figure 4)

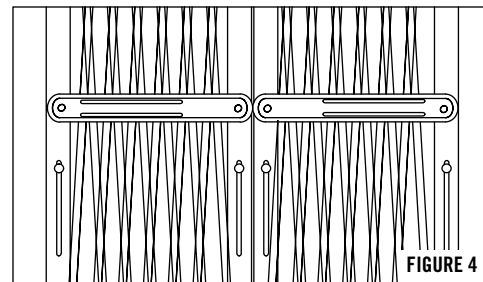

TO MOUNT GATE:

Align padlock holes and mount wall locking bar to wall. (See Figure 5)

